

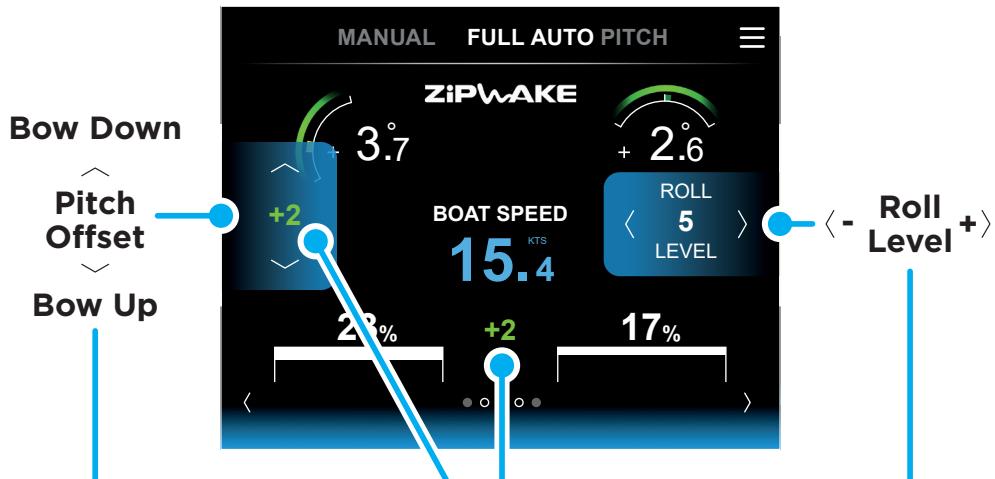


# OPERATOR'S QUICK GUIDE


# AUTOMATIC MODE

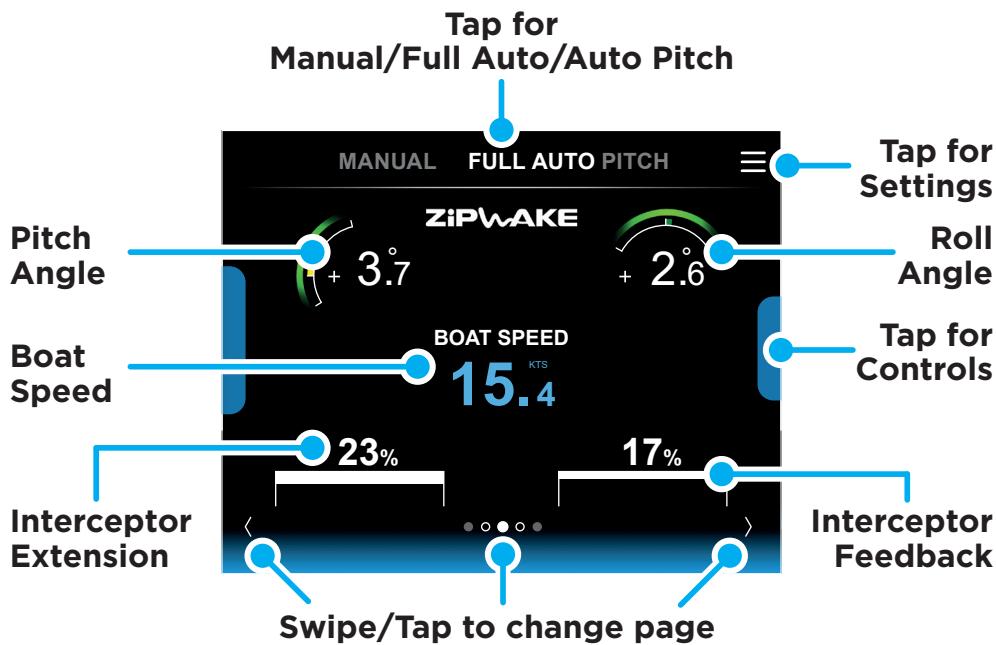


Tap/Hold arrows to alter Pitch Offset  
± 0-99%

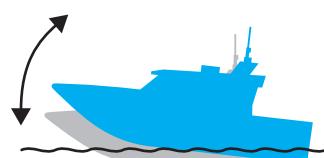

Hold to save Pitch Offset


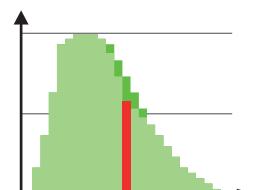


Tap/Hold arrows to alter Roll Level  
1-10 Responsivity

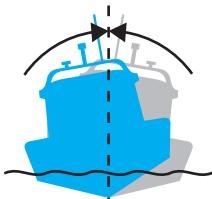


# OPERATOR'S QUICK GUIDE

# MANUAL MODE

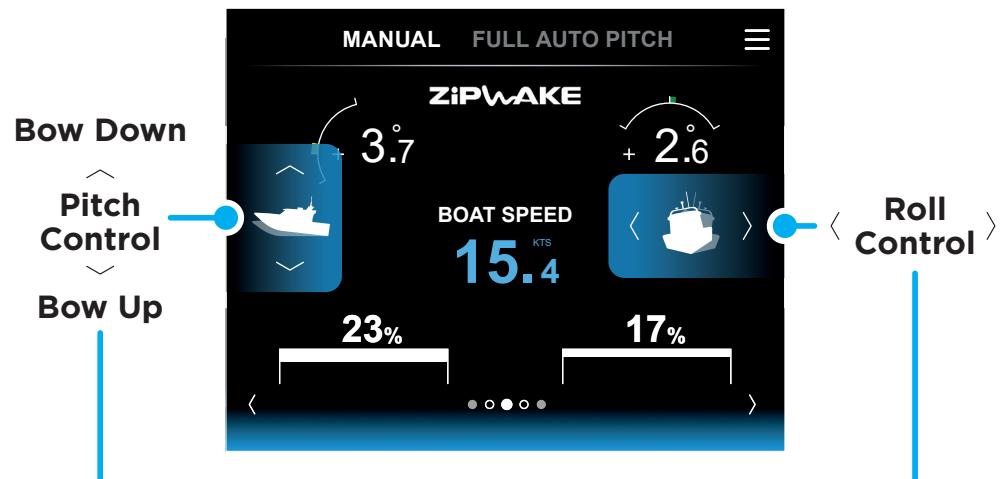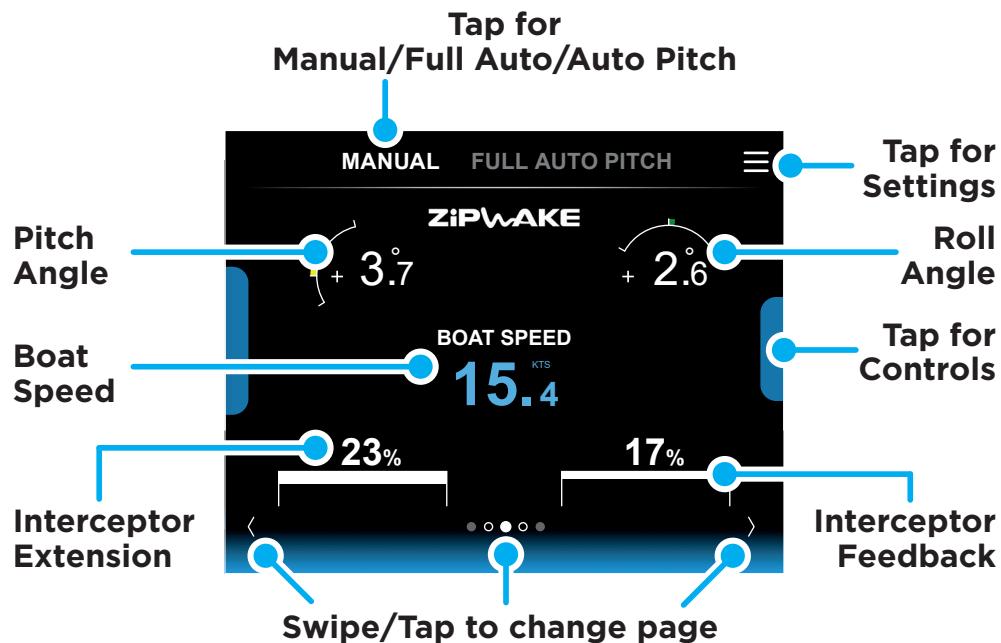

Tap/Hold arrows to adjust Pitch Angle

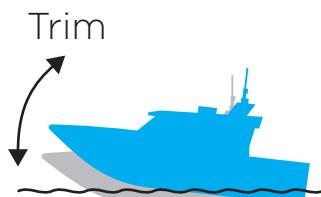

Tap/Hold arrows to adjust Roll Angle

