




Diagrams




E:E End to End linking

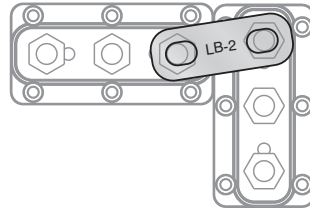


S:E Side to End linking

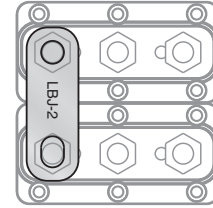


S:S Side to Side joining

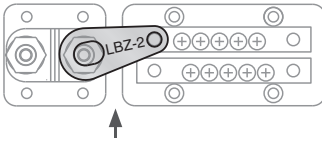


Gap For small gaps between products

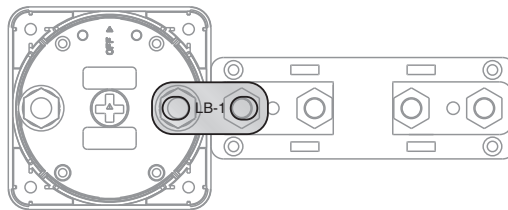

C: Centerline linking

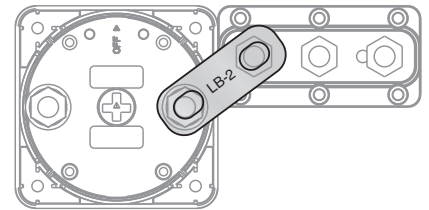


O: Offset linking

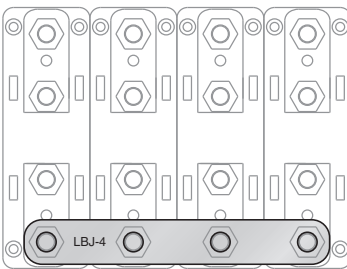

Joining

Best Electrical Practice for High Loads:

- Supply power to the center of link bars or bus bars to balance loads
- Connect highest loads directly/closest to the supply cable

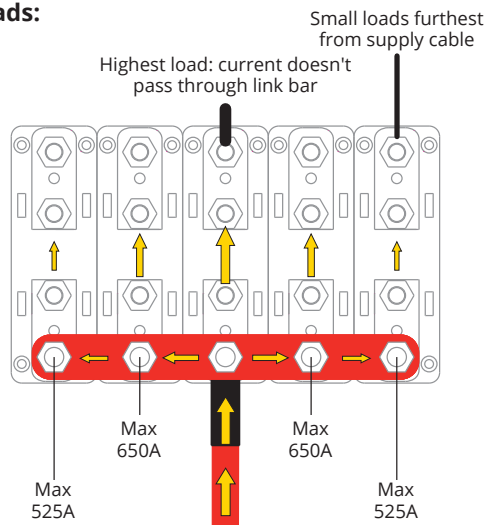

Note: Link bars can be doubled to increase load capacity

